

SLING SHIELD™SLING PROTECTOR

Pat. Pending

The number one cause of synthetic sling failure is cutting. Sling Shield Edge Protectors prevent synthetic slings from being cut by load edges, when used within the recommended load limits. Low weight, high strength extruded aluminum body provides a full 1" radius to protect your slings from even the sharpest of load edges.

> Stop replacing your synthetic slings and wear pads due to cutting. Use the new Lift-All Sling Shields.



Features:

- Aluminum bar with 1" radius supports basket or choker sling tensions of up to 25,000 lbs. per inch of sling width
- Polycarbonate end restraints help keep slings on bar when lifting at angles
- Magnet keeps Sling Shield in place on steel loads while rigging the lift
 • Velcro® straps help keep sling in position prior to lift

Benefits:

- Improves Safety Eliminates dropped loads caused by load edges cutting the sling
- Saves Time Magnet and Velcro® straps greatly reduce riaaina time
- Saves Money No cut slings or wear pads means fewer replacement purchases




Lift-All	SS SS SS SS Widest Weight Web Sling		Largest Appropriate Tuflex Size		Largest Appropriate KeyFlex Size			
Part #	Width (In.)	Length (In.)	(Lbs.)	Web Sling (In.)	Single Leg	Double Leg	Single Leg	Double Leg
SS14	4.50	7.50	2.7	4	EN360	EN120	KEN80K	KEN15K
SS16	6.75	10.00	3.2	6	EN1000	EN240	KEN100K	KEN40K
SS112	12.75	16.00	4.8	12	EN1000	EN1000	KEN100K	KEN100K

LOAD RATINGS

The load rating of Sling Shields is 25,000 lbs. of sling tension per inch of sling width using a basket or choker hitch. This rating is reduced when lifting at side pull angles of less than 70°. Do not exceed listed sling tensions. Prevent **Sling Shield** from sliding when using at an angle. Do not use at side pull angles less than 45°. See Safety Bulletin for more detailed information.

Side Pull	Basket/Choker
Angle	Rating (Lbs.)*
65°	17,500
60°	15,000
55°	13,000
50°	11,000
45°	8,000

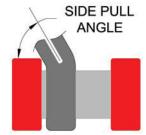

^{*} Ultimate rating regardless of width. Lifting in a vertical hitch reduces these ratings by half.

Velcro[®] is a registered trademark of Velcro Industries B.V.




EDGE DEFENDER™

Pat. Pending

Edge Defender pads are our best synthetic product for protecting slings from being cut by load edges and protecting load edges from being marred due to lifting equipment.

Protect your loads and your slings now by using the new Lift-All Edge Defender!

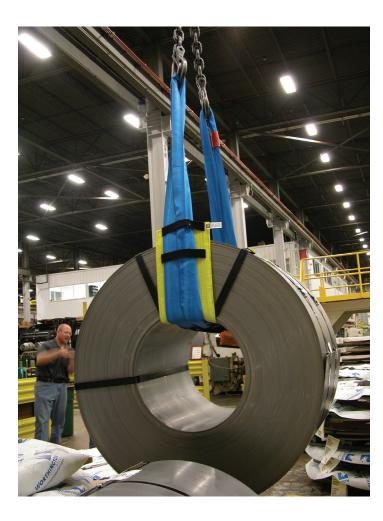


Features:

- Three layers of webbing sewn together with Kevlar® thread
- A layer of orange vinyl is sandwiched between the first and second layer to aid inspection
- Synthetic material is flexible under load
- Velcro® straps help keep sling in position prior to lift

Benefits:

- Improves Safety Thick pad sewn with Kevlar® thread gives excellent cut resistant protection to the sling
- Saves Time Velcro® straps help to keep pad positioned on the sling to reduce rigging time
- Saves Money This longer lasting pad protects slings better, extends sling life and reduces replacement purchases

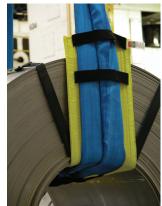

Sta	ndard Pad Wid Appropriate							
Pad	Max. Web	Max.	Max.	Part N	lumbers for S	Standard <i>Edg</i>	e Defender Le	engths
Width (In.)	Sling Width (In.)	Tuflex Size	KeyFlex Size	12 ln.	18 ln.	24 ln.	30 ln.	36 ln.
3	2	EN30	NA	ED3X12IN	ED3X18IN	ED3X24IN	ED3X30IN	ED3X36IN
4	3	EN60	NA	ED4X12IN	ED4X18IN	ED4X24IN	ED4X30IN	ED4X36IN
6	4	EN150	KEN20K	ED6X12IN	ED6X18IN	ED6X24IN	ED6X30IN	ED6X36IN
8	6	EN240	KEN50K	ED8X12IN	ED8X18IN	ED8X24IN	ED8X30IN	ED8X36IN
10	8	EN600	KEN90K	ED10X12IN	ED10X18IN	ED10X24IN	ED10X30IN	ED10X36IN

Velcro® is a registered trademark of Velcro Industries B.V. Kevlar® is a registered trademark of E.I. du Pont de Nemours and Company




WEAR PADS

The Importance of Wear Pads

Wear Pads can help protect slings against cutting and abrasion. The number one cause of synthetic sling failure is cutting. When slings are cut, property damage and personal injury or death can result. Wear pads can help to reduce this problem by acting as a buffer between the load edge and the sling. When used with steel slings, wear pads help protect both sling and load from damage along points of contact.

Always protect slings from being cut or damaged by corners, edges and protrusions using protection sufficient for each application.

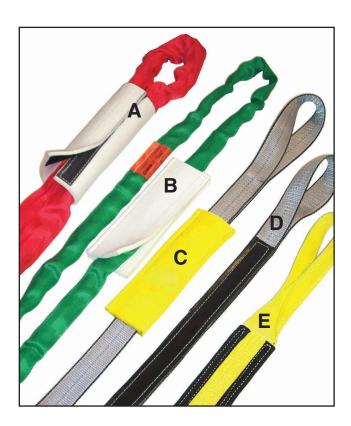

- A Tubular Quick Sleeve using Pukka Pad Material
- B Flat Quick Sleeve using Pukka Pad Material
- C Flat Sewn Sleeve using Webmaster 1600
- D Sewn-On Wear Pad using PVC
- E Edgeguard using texturized nylon

Features, Advantages and Benefits

Promotes Safety

 Helps avoid sling cutting that can cause property damage, personal injury or death.

Saves Money

- Helps protect both sling and load from damage
- Increases sling life

Primary Causes of Cutting - How to avoid

- Edges Edges do not need to be "sharp" to cause sling failure. Increase radius of all edges in contact with slings
- Movement restrict sling movement against edges
- Pressure reduce by using wider or additional slings

A WARNING

Wear pads may not prevent cutting or other sling damage. To avoid severe personal injury or death, keep all personnel clear of loads about to be lifted and suspended loads.

Safe Operating Practices

A qualified person must select materials and methods that adequately protect the slings from damage. *Lift-All* recommends that, prior to making a lift, the load be raised slightly, then lowered so that the slings and wear pads can be inspected for damage. If there is evidence of cutting, the lift should be tested again using different pad materials and/or methods.

Do not ignore warning signs of misuse. Cut marks detected during any sling inspection serve as a clear signal that sling protection must be added or improved.







WEAR PAD STYLES

_						
Pre		ed in a variety of lifting situations. Easily reposit lift without movement against load edge.	ioned along sling body to accommodate loads of various sizes.			
А	Tubular Quick Sleeve	Use with: <i>Tuflex</i> Roundslings Chain and Wire Rope Slings Available materials: All (except PVC)	High strength Velcro* for secure positioning, tubular design gives maximum useable surface and maximum pad life.			
В	Flat Quick Sleeve	Use with: All Slings Available materials: All (except PVC)	Velcro* allows easy installation and removal. Friction keeps sleeve in place when rigging.			
С	Flat Sewn Sleeve	Use with: All Slings Available materials: All (except PVC)	Preferred for long term use on single sling. May be repositioned as needed along sling length. May require factory installation on slings with hardware and on single leg <i>Tuflex</i> .			
Poly Pads		Use with: Web Slings (Limited range of sizes) Available materials: PVC	Slides easily along sling length for convenient sling protection. Must be installed at factory for web slings with hardware.			
For	SEWN-ON TYPE For use on web slings where repetitive lifting situations subject known areas of the sling to cutting and/or abrasion. Eliminates the need to position pad before each lift.					
1 D I Sewn-On Wear Page 1		For sling protection at expected wear points. Can be sewn anywhere on the sling, be any length and be on one or both sides.				
Е	E Edgeguard Use with: Web Slings Only Available materials: Texturized nylon or light duty leather		Helps protect edges of sling. Both edges will be covered to the length and position required.			

WEAR PAD MATERIALS

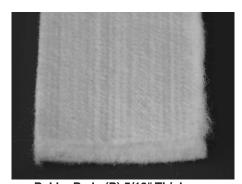


Pukka-Pads (P) 5/16" Thick A high density, polyester felt.

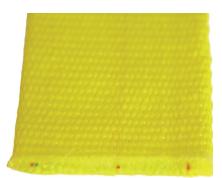

Webmaster 1600 (N) 3/16" Thick Heavy nylon sling webbing with red core warning yarns.




Heavy Leather (HL) 5/32" Thick • Genuine top-grain cowhide (may require multiple pieces for longer lengths.)

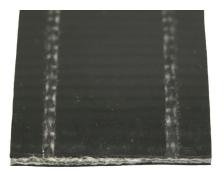


PVC Belting (PVC) 1/8" Thick Non-absorbent conveyor type belting.



• A bulked nylon fiber is used to







A thin, 2-ply wear resistant fabric made of bulked nylon fiber, appropriate for wider sleeves and bundling applications.

^{*} Velcro ® is a registered trademark of Velcro Industries B.V.



WEAR PADS

Flat Quick Sleeves



Flat Quick Sleeve Widths and Largest Appropriate Slings 1

	٥.		Tuflex			Key	flex			
Part No.	Sleeve Width ² (in.)	Web Sling Width ³ (in.)	Single Leg	Double Leg	6-Part Braid	8-Part Braided	Single Leg	Double Leg	Wire Rope Sling Dia. (in.)	Chain Sling Size (in.)
3FQS	3	1					10K		7/16	
4FQS	4	2	EN60	EE30			20K		3/4	9/32
5FQS	5	3	EN150	EE60			30K	10K	1 1/8	3/8
6FQS	6	4	EN180	EE120	B6E30		80K	20K	1 1/2	1/2
8FQS	8	6	EN360	EE240	B6E60	B8E30	125K	30K	2 1/4	5/8
10FQS	10	8	EN800	EE360	B6E120	B8E90	175K	80K	2 1/2	7/8
12FQS	12	10	EN1000	EE600	B6E180	B8E150	200K	125K		1

- Note: 1. Slings shown are the maximum recommended size for each sleeve width.
 - 2. Width of sleeve depends on the material being used. This chart is based on using Pukka Pad material.
 - 3. One or two ply only. For three or four ply, go to the next larger sleeve.

Tubular Quick Sleeves





Tubular Quick Sleeve Widths and Largest Appropriate Slings 1

	Open		Tufle	ex		Keyflex			
Part No.	Sleeve Width (A) (in.)	Single Leg	Double Leg	6-Part Braid	8-Part Braid	Single Leg	Double Leg	Wire Rope Sling Dia. (in.)	Chain Sling Size (in.)
4TQS	4							1/4	
5TQS	5							1/2	
6TQS	6	EN60				10K		7/8	7/32
8TQS	8	EN150	EE60			30K		1 1/2	3/8
10TQS	10	EN240	EE120	B6E60	B8E30	50K	15K	2	5/8
12TQS	12	EN360	EE180	B6E90	B8E60	80K	30K	2 1/2	3/4
14TQS	14	EN800	EE240		B8E90	125K	50K		1
16TQS	16	EN1000	EE360	B6E150	E8E120	175K	80K		1 1/4
18TQS	18		EE600	B6E240	B8E180	200K	100K		
20TQS	20		EE800				125K		
22TQS	22		EE1000	B6E360	B8E240		175K		
24TQS	24						200K		
26TQS	26			B6E600	B8E360				
30TQS	30			B6E800	B8E600				
34TQS	34			B6E1000	B8E800				

Note:

- 1. Slings shown are the maximum recommended size for each sleeve width.
- 2. Tubular Pukka Pads not available under 10" open sleeve width.

Edgeguard (Code EG)

Sewn-On Wear Pads (Code WP)





Texturized Web

PVC

Sling Protection

WEAR PADS

Standard Sewn-Sleeves

Sewn-Sleeve Widths and Largest Appropriate Slings 1



	Sleeve	Web Sling		<i>Tu fl</i> ex			<i>Keyfl</i> ex			Chain
Part No.	Width ² Width ³ (in.)		Single Leg	Double Leg	6-Part Braid	8-Part Braid	Single Leg	Double Leg	Wire Rope Sling Dia (in.)	Sling Size (in.)
3SS	3	1	EN60						3/4	7/32
4SS	4	2	EN150	EE60			15K		1 1/8	3/8
5SS	5	3	EN240	EE120	B6E30		30K		1 1/2	1/2
6SS	6	4	EN360	EE180	B6E60	B8E30	80K	15K	1 3/4	5/8
8SS	8	6	EN800	EE360	B6E120	B8E60	100K	40K	2 1/2	7/8
10SS	10	8	EN1000	EE600	B6E180	B8E150	175K	80K		1
12SS	12	10		EE1000	B6E240	B8E180	200K	125K		1 1/4

Note:

- 1. Slings shown are the maximum recommended size for each sleeve width.
- 2. Width of sleeve depends on the material being used. This chart is based on using Pukka Pad material.
- 3. One or two ply only. For three or four ply, go to the next larger sleeve.

Poly Pads

Easily movable Poly Pads are made of tough, woven polyester fabric impregnated and coated with PVC. Easy to position on both web slings and tiedowns. Poly Pads are designed to give protection when lifting on load edges or abrasive loads.

Part No.	Poly Pad	Web Width (in.)		
60115	3 1/2 x 12	1 - 2		
60116	6 x 12	3 - 4		



How To Order

1. Choose code for width and style

TQS	Tubular Quick Sleeve
FQS	Flat Quick Sleeve
SS	Flat Sewn Sleeve
WP	Sewn-On Wear Pad
EG	Edgeguard

2. Choose a Material

P	5/16" Heavy Duty Pukka-Pad
N	Webmaster 1600 Nylon
HL	Heavy Leather
TN	Texturized Nylon
BN	Ballistic Nylon (Tubular only)
PVC	(Sewn-on Wear Pads only)

Poly Pad (Use Part No.)

3. Length of Sleeve

(if sewn-on pad, describe position on sling)
———— Feet

- 4. For Use On
 - ____ Web Sling Code or Width
 ___ Tuflex ___ Single-Leg Code ___

__ Double-Leg - Code _



Chain Sling Size _____ inchesWire Rope Sling - Dia. _____ inches

A WARNING

Wear pads may not prevent cutting or other sling damage. To avoid severe personal injury or death, keep all personnel clear of loads about to be lifted and suspended loads.